

# Противоаэрозольные респираторы серии 2700N95

## Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04  
Ангарск (3955)60-70-56  
Архангельск (8182)63-90-72  
Астрахань (8512)99-46-04  
Барнаул (3852)73-04-60  
Белгород (4722)40-23-64  
Благовещенск (4162)22-76-07  
Брянск (4832)59-03-52  
Владивосток (423)249-28-31  
Владикавказ (8672)28-90-48  
Владимир (4922)49-43-18  
Волгоград (844)278-03-48  
Вологда (8172)26-41-59  
Воронеж (473)204-51-73  
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06  
Ижевск (3412)26-03-58  
Иркутск (395)279-98-46  
Казань (843)206-01-48  
Калининград (4012)72-03-81  
Калуга (4842)92-23-67  
Кемерово (3842)65-04-62  
Киров (8332)68-02-04  
Коломна (4966)23-41-49  
Кострома (4942)77-07-48  
Краснодар (861)203-40-90  
Красноярск (391)204-63-61  
Курск (4712)77-13-04  
Курган (3522)50-90-47  
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13  
Москва (495)268-04-70  
Мурманск (8152)59-64-93  
Набережные Челны (8552)20-53-41  
Нижний Новгород (831)429-08-12  
Новокузнецк (3843)20-46-81  
Ноябрьск (3496)41-32-12  
Новосибирск (383)227-86-73  
Омск (3812)21-46-40  
Орел (4862)44-53-42  
Оренбург (3532)37-68-04  
Пенза (8412)22-31-16  
Петрозаводск (8142)55-98-37  
Псков (8112)59-10-37  
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15  
Рязань (4912)46-61-64  
Самара (846)206-03-16  
Санкт-Петербург (812)309-46-40  
Саратов (845)249-38-78  
Севастополь (8692)22-31-93  
Саранск (8342)22-96-24  
Симферополь (3652)67-13-56  
Смоленск (4812)29-41-54  
Сочи (862)225-72-31  
Ставрополь (8652)20-65-13  
Сургут (3462)77-98-35  
Сыктывкар (8212)25-95-17  
Тамбов (4752)50-40-97  
Тверь (4822)63-31-35

Тольятти (8482)63-91-07  
Томск (3822)98-41-53  
Тула (4872)33-79-87  
Тюмень (3452)66-21-18  
Ульяновск (8422)24-23-59  
Улан-Удэ (3012)59-97-51  
Уфа (347)229-48-12  
Хабаровск (4212)92-98-04  
Чебоксары (8352)28-53-07  
Челябинск (351)202-03-61  
Череповец (8202)49-02-64  
Чита (3022)38-34-83  
Якутск (4112)23-90-97  
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: [mxx@nt-rt.ru](mailto:mxx@nt-rt.ru) || сайт: <https://moldex.nt-rt.ru/>

# MOLDEX®

## 2700 SERIES N95 DISPOSABLE RESPIRATOR W/ HANDYSTRAP® AND VENTEX® VALVE

### HANGS LOOSE

HandyStrap allows mask to conveniently hang down around the user's neck. You'll find it's a convenient place to keep it when you're not using it. And during wear the elastic cloth strap feels comfortable and cool.

### DURA-MESH® SHELL LASTS LONGER

The exclusive Dura-Mesh shell protects the filter media so it stays cleaner-looking longer. The shell also resists collapsing in hot, humid environments so the respirator holds its shape longer. The result is fewer respirators used and lower costs.

### SOFT FOAM NOSE CUSHION

Easier to wear and more all-day comfort for the majority of the work force. Contoured nose bridge with a soft foam nose cushion for comfortable seal. No metal noseband to adjust.

### VENT HOT AIR, STAY COOLER

Exclusive Ventex valve lets the hot air out faster so breathing resistance is reduced and workers stay cooler.

### FEATURES

- HandyStrap with buckle, allows mask to hang down around the user's neck when not in use.
- Cloth HandyStrap feels cool and comfortable.
- Facepiece is naturally contoured without pressure points.
- Soft foam nose cushion for added comfort and no pressure points.
- Exclusive Dura-Mesh shell resists collapsing in heat and humidity.
- Softspun® lining for increased comfort and durability.
- Available in three sizes, for most workers and OSHA compliance.
- Meets heat and flame resistance in accordance with ANSI/ISEA 110-2009 Section 7.11.1.
- 100% PVC-Free for a greener alternative.
- 100% Made in the USA

### N95 APPLICATIONS


Grinding, Torch Cutting, Sanding, Metal Pouring, Sweeping, Metal Working, Bagging, Foundries, Stone Quarrying, Agriculture, Metal Machining, Construction Sites, Cement, Ceramics Manufacturing, Underground Mining, Timber/Lumber Mills, Polishing, Buffing, Lime, Poultry, Textiles, Welding, Brazing, Soldering.



2700N95



M2700N95

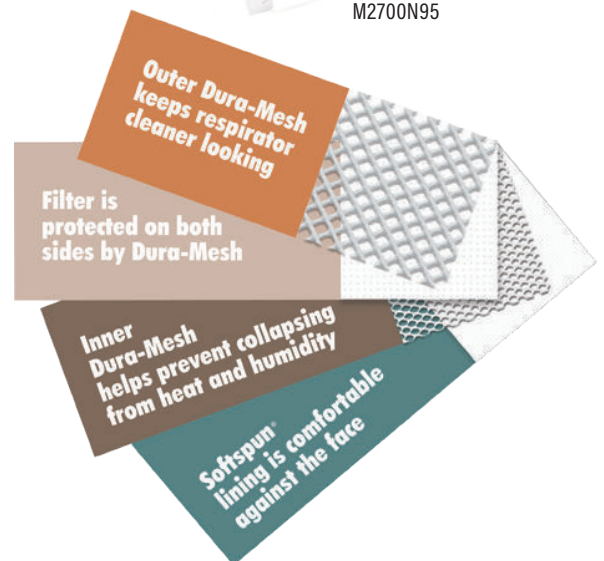



## 2700 SERIES N95 DISPOSABLE RESPIRATOR W/ HANDYSTRAP® AND VENTEX® VALVE

PART #	SIZE	VALVE TYPE	HANDYSTRAP MATERIAL	DISPLAY QUANTITY	CASE QUANTITY
2700N95	M/L	Ventex	Cloth	10/Box	10 Boxes
2701N95	S	Ventex	Cloth	10/Box	10 Boxes
2707N95	LP	Ventex	Cloth	10/Box	10 Boxes
M2700N95	M/L	Ventex	Cloth	10/Box	10 Boxes

### VENDING PACK FOR VENDING MACHINES

PART #	SIZE	DESCRIPTION	DISPLAY QUANTITY	CASE QUANTITY
2700V	M/L	Vending Pack in PVC-Free bag	2/Pack	40 Pack per case

#### WARNING TO USER

- Follow all instructions and warnings on the use of this respirator and wear during all times of exposure. Failure to do so will reduce respirator effectiveness, wearer protection and may result in sickness or death.
- Before use, the user must first be trained by the employer in proper respirator use, in accordance with applicable safety and health standards, for the contaminant and exposure level in the assigned work area.
- The particulates and other contaminants which can be dangerous to your health include those which you cannot see, taste, or smell.

#### LIMITED WARRANTY IMPORTANT NOTICE TO PURCHASER

This limited warranty is made in lieu of the warranties of merchantability, fitness for particular purposes and all other warranties, express or implied. There are no other warranties which extend beyond the description on the face hereof. The physical standards and specifications of Moldex will be met by products sold. Exclusive Remedies: damages for the breach of this limited warranty are limited to the replacement of such quantity of Moldex, products proved to be defectively manufactured. Except as provided above, Moldex shall not be liable or responsible for any loss, damage, or liability, direct, indirect, incidental, special, or consequential, arising out of sale, use, or misuse, or the inability to use products by the user.

THESE RESPIRATORS ARE APPROVED ONLY IN THE FOLLOWING CONFIGURATIONS:					
TC-	PROTECTION <sup>1</sup>	RESPIRATOR		CAUTIONS AND LIMITATIONS <sup>2</sup>	
		2700N95	2701N95	2707N95	
TC-84A-0120	N95	X	X	X	ABCJMNOP

**1. Protection**  
N95 Particulate Filter (95% filter efficiency level) effective against particulate aerosols free of oil; time use restrictions may apply

**2. Cautions and Limitations**  
A- Not for use in atmospheres containing less than 19.5 percent oxygen.  
B- Not for use in atmospheres immediately dangerous to life or health.  
C- Do not exceed maximum use concentrations established by regulatory standards.  
J- Failure to properly use and maintain this product could result in injury or death.  
M- All approved respirators shall be selected, fitted, used, and maintained in accordance with MSHA, OSHA, and other applicable regulations.  
N- Never substitute, modify, add, or omit parts. Use only exact replacement parts in the configurations as specified by the manufacturer.  
O- Refer to user's instructions, and/or maintenance manuals for information on use and maintenance of these respirators.  
P- NIOSH does not evaluate respirators as surgical masks.

#### USE AGAINST:

- Particulate aerosols free of oil.

#### DO NOT USE AGAINST:

- Concentrations of contaminants which are unknown, or are immediately dangerous to life or health.
- Concentrations of particulates which exceed the maximum use concentration or 10 times the OSHA Permissible Exposure Limit, whichever is lower.
- Gases, vapors, asbestos, paint spray, sandblasting or particulate materials which generate harmful vapors.
- Oil-based mists.

#### RESTRICTIONS:

- This respirator does not supply oxygen and must not be used in atmospheres containing less than 19.5% oxygen.
- Do not remain in contaminated area if any physical distress occurs, for example breathing difficulty, dizziness or nausea.
- Leave contaminated area and replace respirator if it is damaged, distorted, a proper fit can not be obtained or breathing becomes difficult.
- Prior to each use, carefully inspect the entire respirator, including filter media and strap/weld attachment area for tears and damage. Staple or strap/weld attachment perforations do not affect respirator performance.
- Do not alter, modify, or abuse this respirator.
- Store unused respirators in box/bag in a clean, dry, non-contaminated area.
- Dispose of respirator according to your employer's policy and local regulations.
- Dispose no later than thirty days after first use.
- Use respirator before the "use by" expiration date printed on box/bag.
- If used for welding, wear appropriate eye and face protection.

## По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04  
Ангарск (3955)60-70-56  
Архангельск (8182)63-90-72  
Астрахань (8512)99-46-04  
Барнаул (3852)73-04-60  
Белгород (4722)40-23-64  
Благовещенск (4162)22-76-07  
Брянск (4832)59-03-52  
Владивосток (423)249-28-31  
Владикавказ (8672)28-90-48  
Владимир (4922)49-43-18  
Волгоград (844)278-03-48  
Вологда (8172)26-41-59  
Воронеж (473)204-51-73  
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06  
Ижевск (3412)26-03-58  
Иркутск (395)279-98-46  
Казань (843)206-01-48  
Калининград (4012)72-03-81  
Калуга (4842)92-23-67  
Кемерово (3842)65-04-62  
Киров (8332)68-02-04  
Коломна (4966)23-41-49  
Кострома (4942)77-07-48  
Краснодар (861)203-40-90  
Красноярск (391)204-63-61  
Курск (4712)77-13-04  
Курган (3522)50-90-47  
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13  
Москва (495)268-04-70  
Мурманск (8152)59-64-93  
Набережные Челны (8552)20-53-41  
Нижний Новгород (831)429-08-12  
Новокузнецк (3843)20-46-81  
Ноябрьск (3496)41-32-12  
Новосибирск (383)227-86-73  
Омск (3812)21-46-40  
Орел (4862)44-53-42  
Оренбург (3532)37-68-04  
Пенза (8412)22-31-16  
Петрозаводск (8142)55-98-37  
Псков (8112)59-10-37  
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15  
Рязань (4912)46-61-64  
Самара (846)206-03-16  
Санкт-Петербург (812)309-46-40  
Саратов (845)249-38-78  
Севастополь (8692)22-31-93  
Саранск (8342)22-96-24  
Симферополь (3652)67-13-56  
Смоленск (4812)29-41-54  
Сочи (862)225-72-31  
Ставрополь (8652)20-65-13  
Сургут (3462)77-98-35  
Сыктывкар (8212)25-95-17  
Тамбов (4752)50-40-97  
Тверь (4822)63-31-35

Тольятти (8482)63-91-07  
Томск (3822)98-41-53  
Тула (4872)33-79-87  
Тюмень (3452)66-21-18  
Ульяновск (8422)24-23-59  
Улан-Удэ (3012)59-97-51  
Уфа (347)229-48-12  
Хабаровск (4212)92-98-04  
Чебоксары (8352)28-53-07  
Челябинск (351)202-03-61  
Череповец (8202)49-02-64  
Чита (3022)38-34-83  
Якутск (4112)23-90-97  
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: [mxx@nt-rt.ru](mailto:mxx@nt-rt.ru) || сайт: <https://moldex.nt-rt.ru/>